


Ball Bearing Glide Assembly Guide



Parts Guide

inner glide

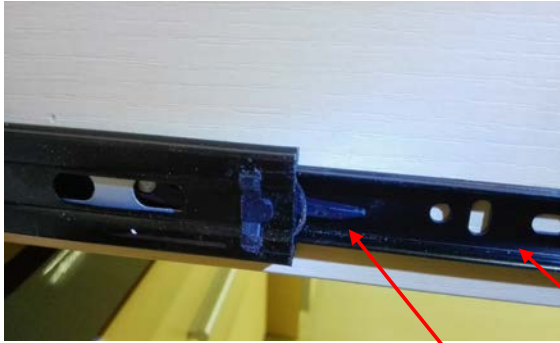

spring lock

outer glide

To Assemble:

1. To prep the glide because they are new, slide the silver moving plate back and forth a few times to loosen. See PIC A and PIC B, push the moving silver rail to the very back of the glides (back of item) on both sets of outer glides

2. Align the throngs on the inner glide STRAIGHT with the larger opening of the outer glide and insert

3. Use a little push to force the inner glide into the silver moving plate

PIC A



A. before inserting the inner glide, push the moving silver rail towards the very back on both sides

PIC B



B. When assembling, make sure the two throngs on the inner glide line up STRAIGHT to the two larger openings on the outer guide

To Remove

1. Pull the drawer out to the very front.

2. Using your right index finger, push the spring lock up and at the same time, using your left index finger, push the spring lock down. If you cannot get to the spring lock, you can try something thin and hard. (i.e. tweezers, stick pen)

3. While holding the spring locks in this position, use a little effort to pull the drawer out of the unit.