


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

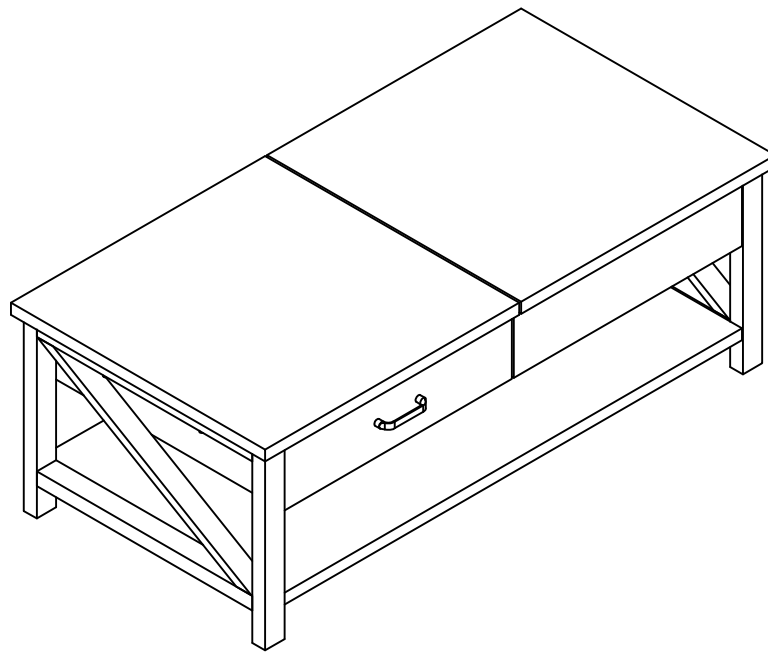

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 212867CT

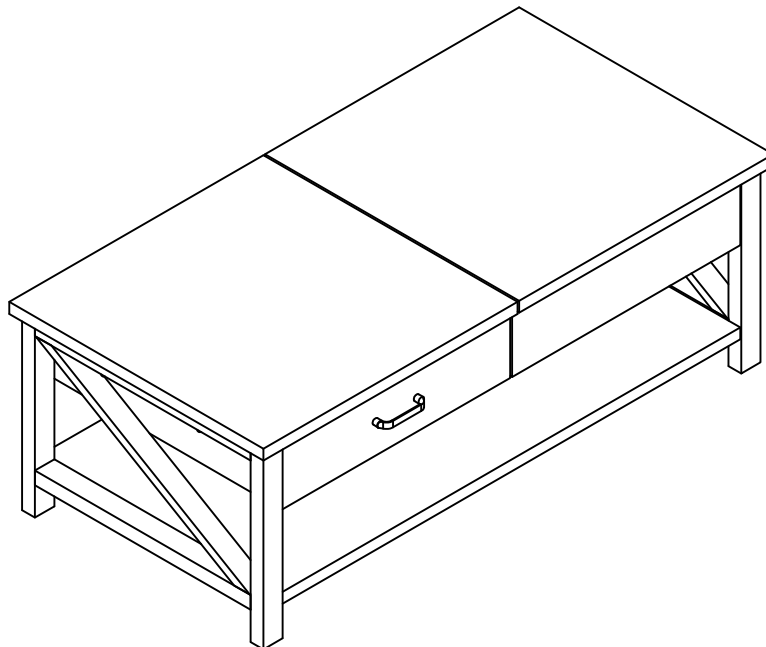

PARTS IDENTIFICATION

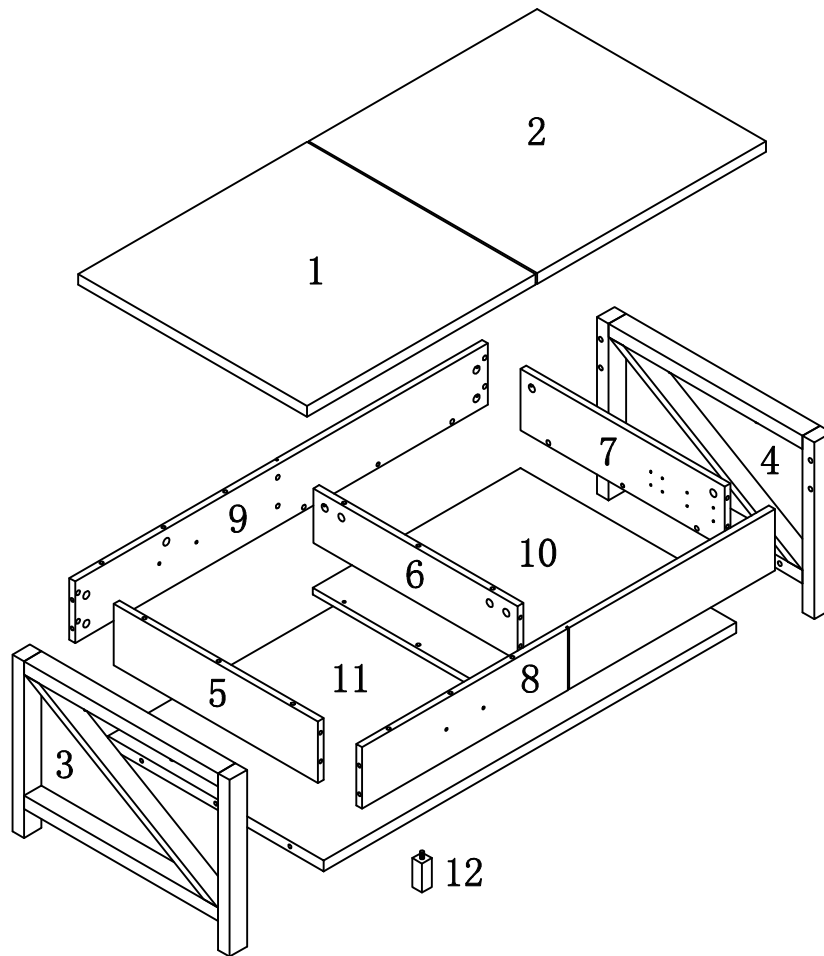











ITEM#: 212867CT



(1)	1pc	(7)	1pc
(2)	1pc	(8)	1pc
(3)	1pc	(9)	1pc
(4)	1pc	(10)	1pc
(5)	1pc	(11)	1pc
(6)	1pc	(12)	1pc



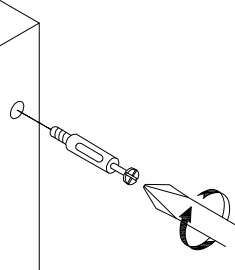
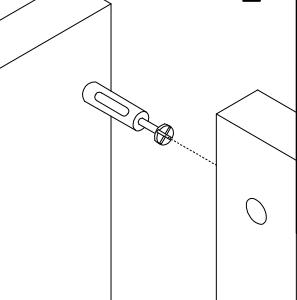
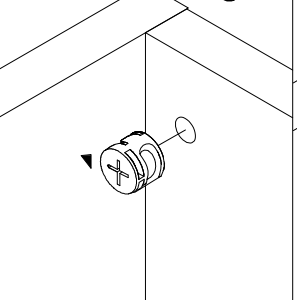
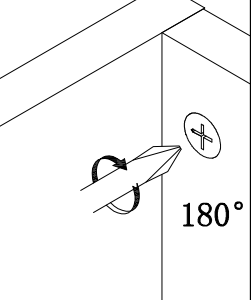
HARDWARE IDENTIFICATION

ITEM#: 212867CT


A		L29	30pcs
B		ø15	30pcs
C		ø8x25	18pcs
D		ø4x16	16pcs
E		ø4x20	10pcs
F		ø4x40	2pcs
G			2pcs
H		M4x22	4pcs
I		ø22	6pcs
J		ø16	4pcs
K			1pc
L		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#: 212867CT


HOW TO	1	2	3	4
 Cam Bolt  Cam Lock				
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

STEP 1

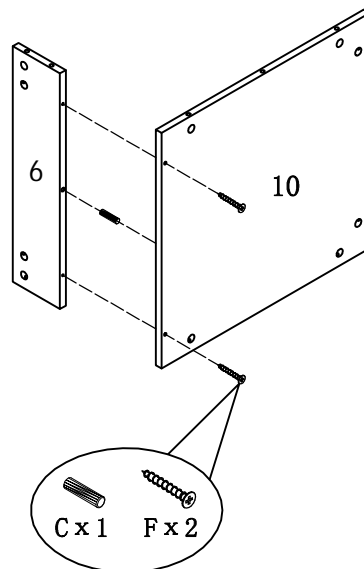


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

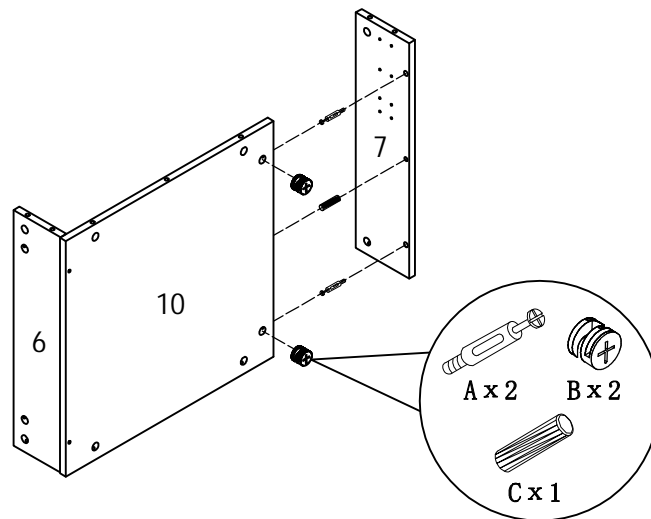


STEP2

STEP3

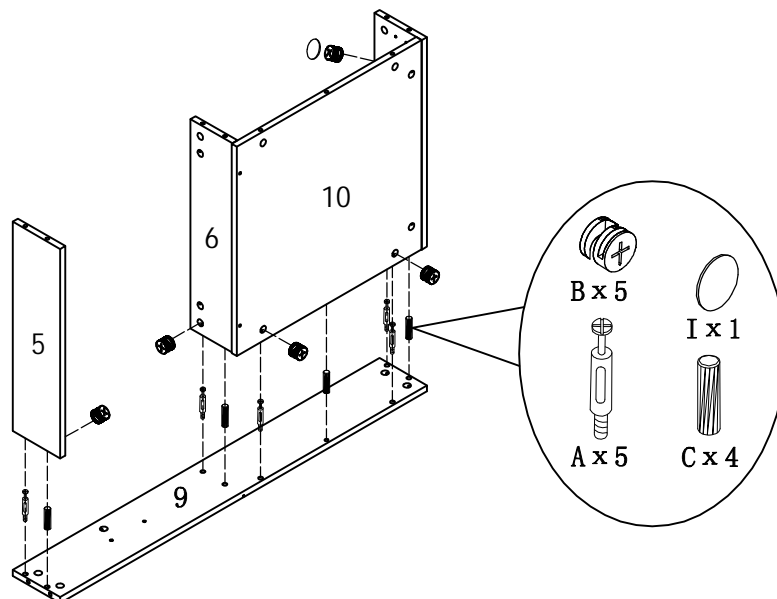


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

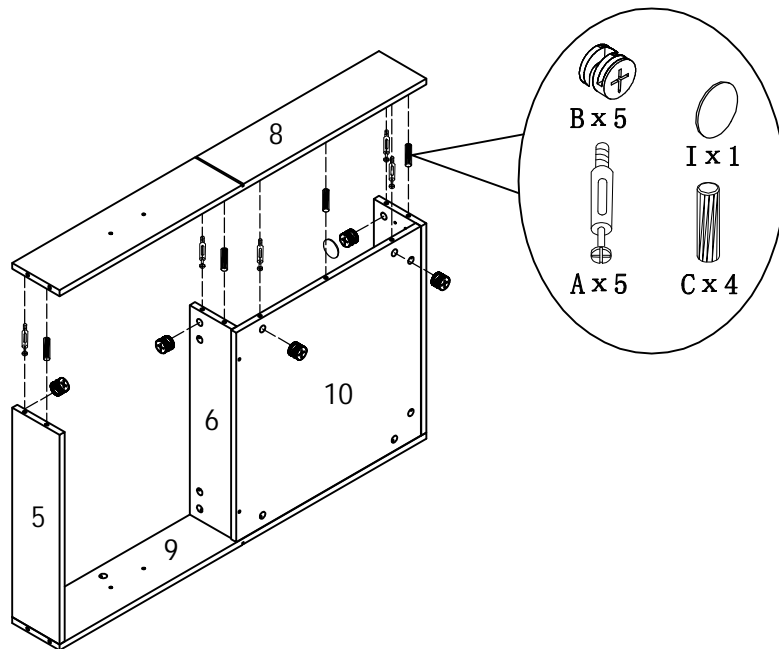


STEP 4

STEP 5

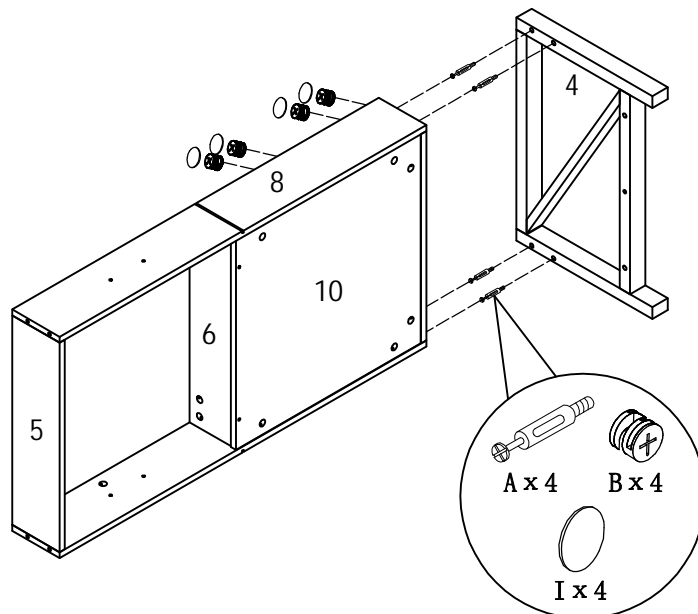


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

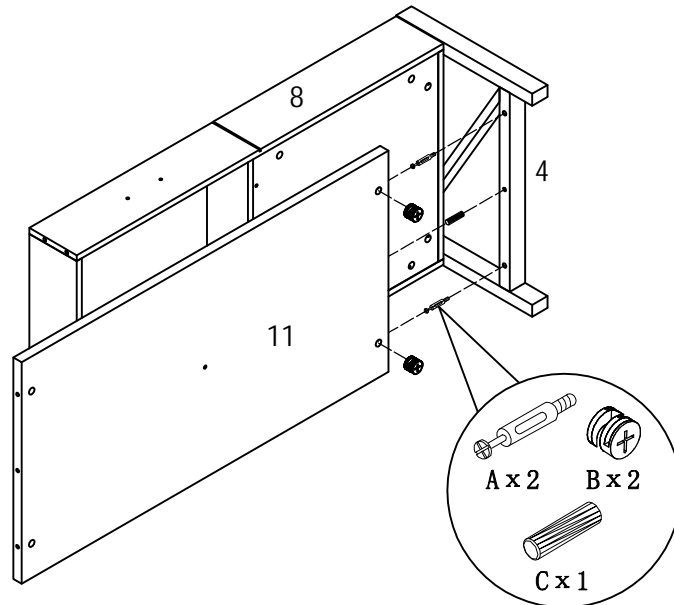


STEP 6

STEP 7

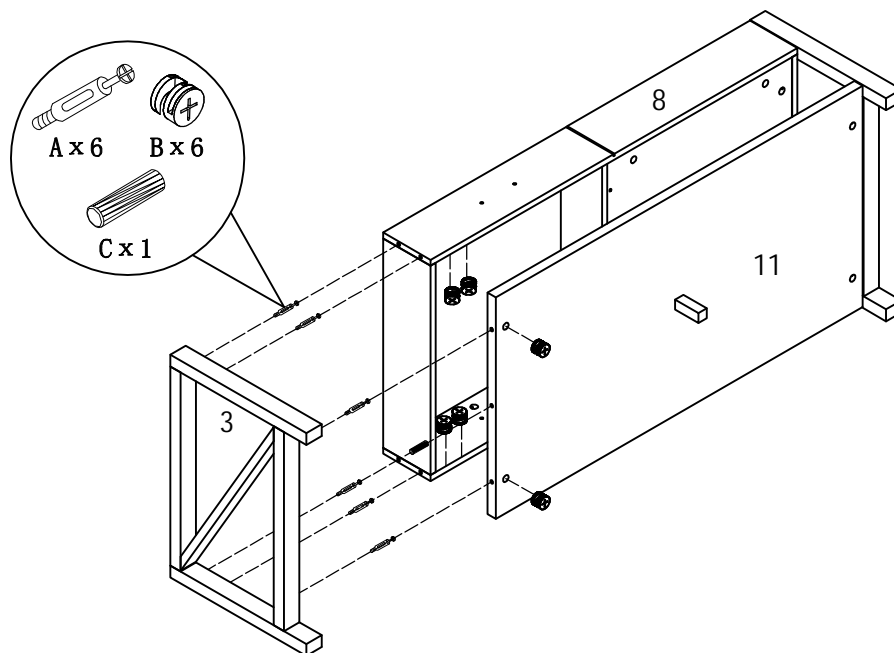


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

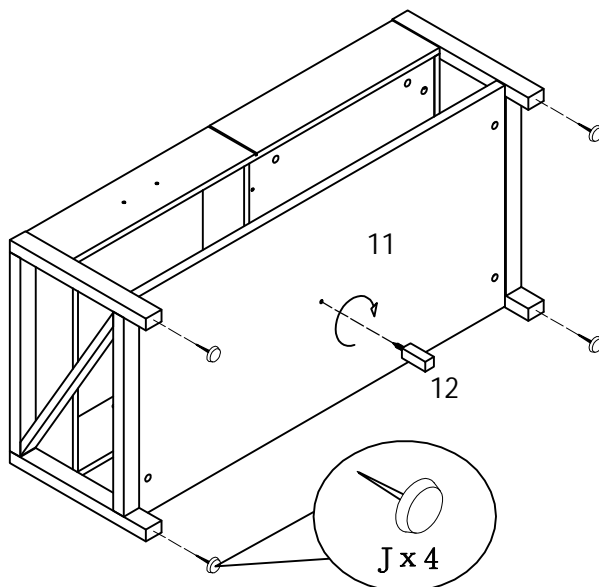


STEP8

STEP9

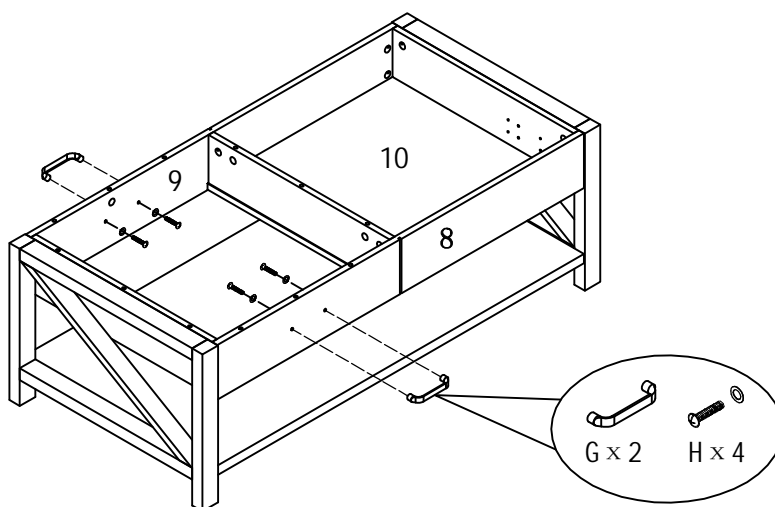


ASSEMBLY INSTRUCTION

ITEM#: 212867CT

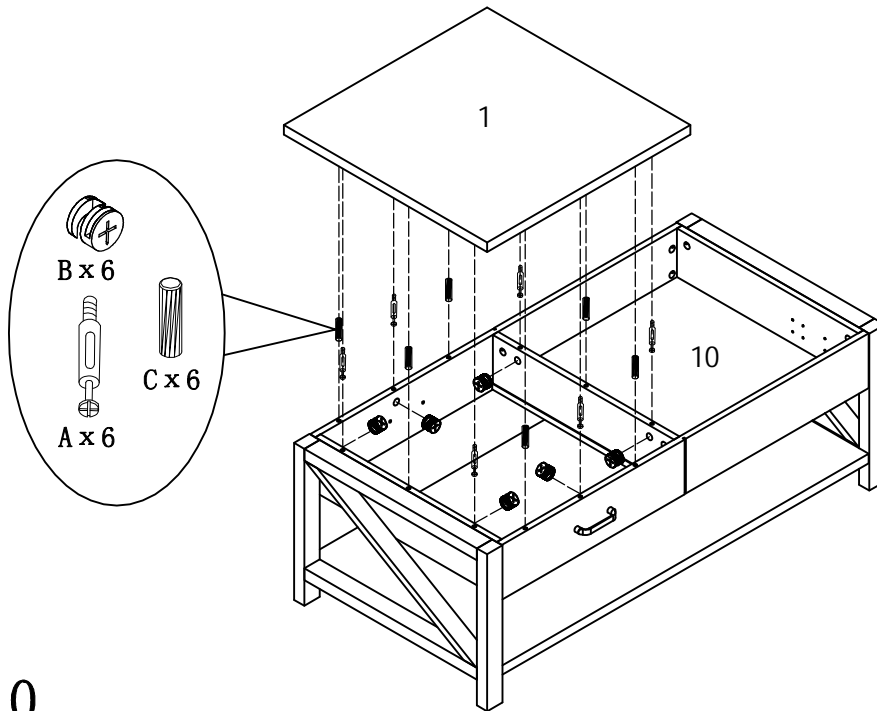


STEP 10

STEP 11

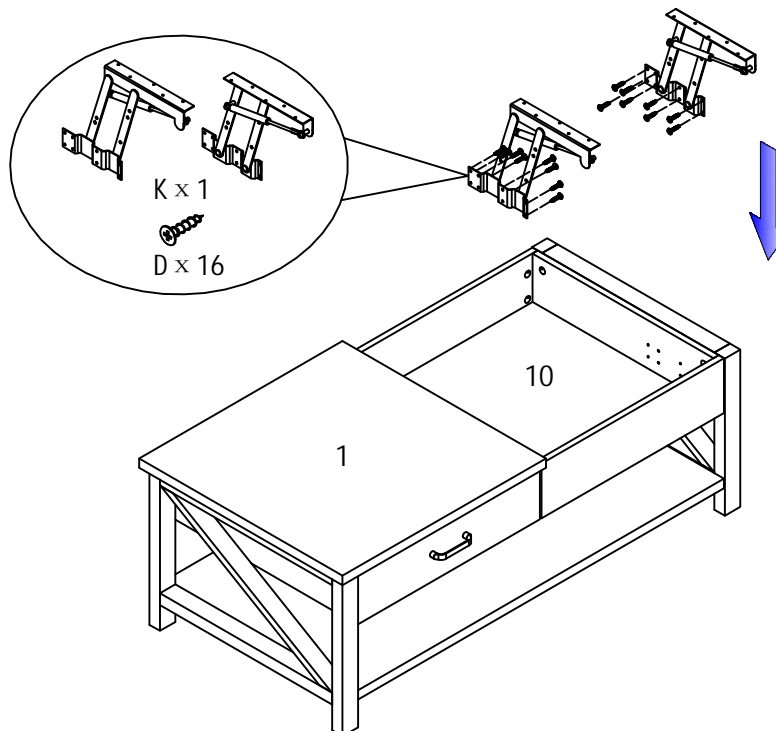

ASSEMBLY INSTRUCTION

ITEM#: 212867CT

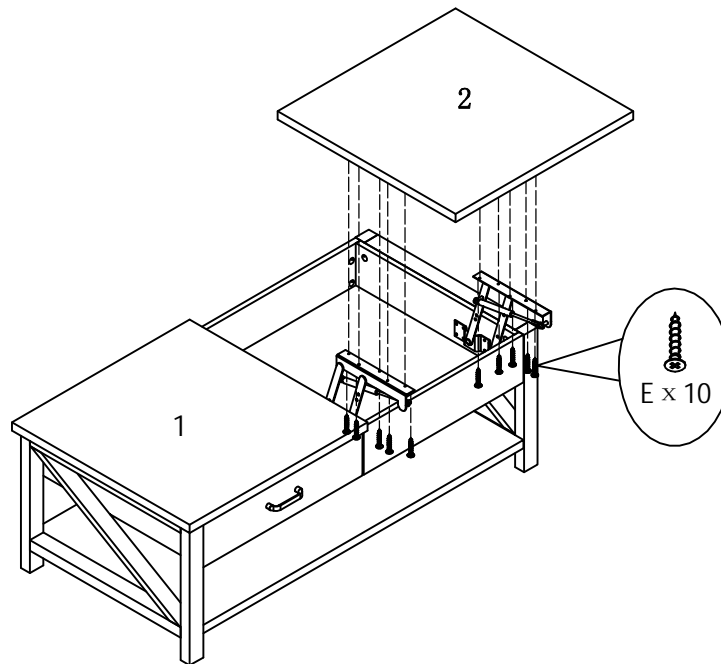

STEP 12

STEP 13

